










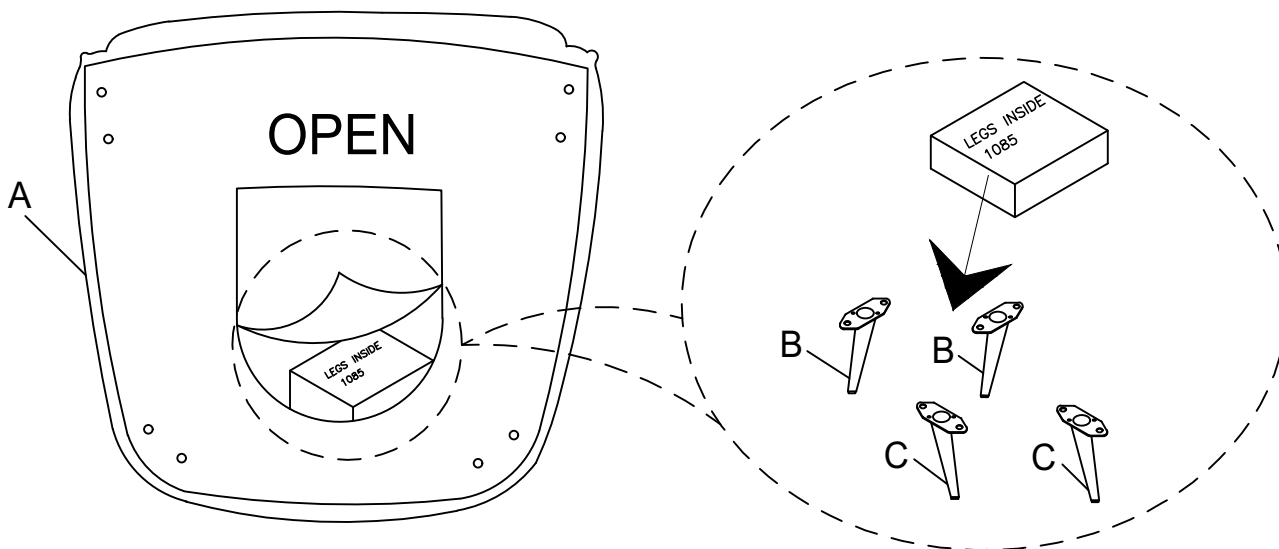
Legs and hardware are stored inside the seat, please take out for assembly

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


PART	DRAWING	DESCRIPTION	QTY
A		NASHVILLE ACCENT CHAIR	1 PC
B		LEG B	2 PCS
C		LEG C	2 PCS

PART	DRAWING	DESCRIPTION	QTY
1		BOLT (Ø5/16" *1-1/4")	8 PCS
2		SPRING WASHER (Ø5/16")	8 PCS
3		FLAT WASHER (Ø5/16")	8 PCS
4		ALLEN KEY (M4)	1 PC
5		SCREW (M4*1-1/4"L)	8 PCS


STEP 1:



STEP 2:

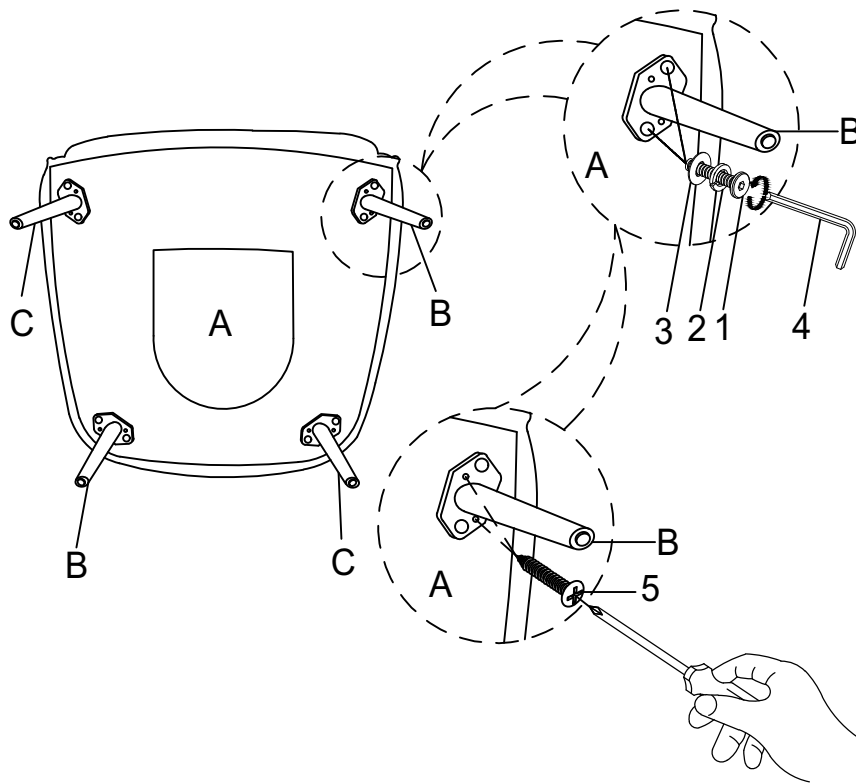

COMPLETED

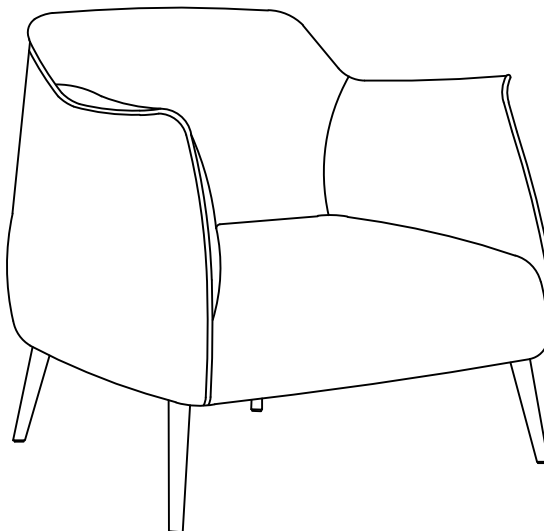

Care Instruction for leather Gel Furniture:

In order to maintain the original appearance of your leather Gel Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage leather Gel.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.