



Assembly Instructions  
ITEM NO.: 1248DG-1  
Accent Chair

 
H O M E E L E G A N C E







Legs & hardware are stored at the bottom of Accent Chair, please take out the legs and hardware for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

### Component list

No	Drawing	Qty	Description
A		1	CHAIR
B		2	FRONT LEGS
C		2	REAR LEGS
D		6	BOLT 5/16"*25mm
E		6	FLAT WASHER 5/16 "
F		6	SPRING WASHER 5/16 "
G		1	ALLEN WRENCH M4
H		2	WASHER

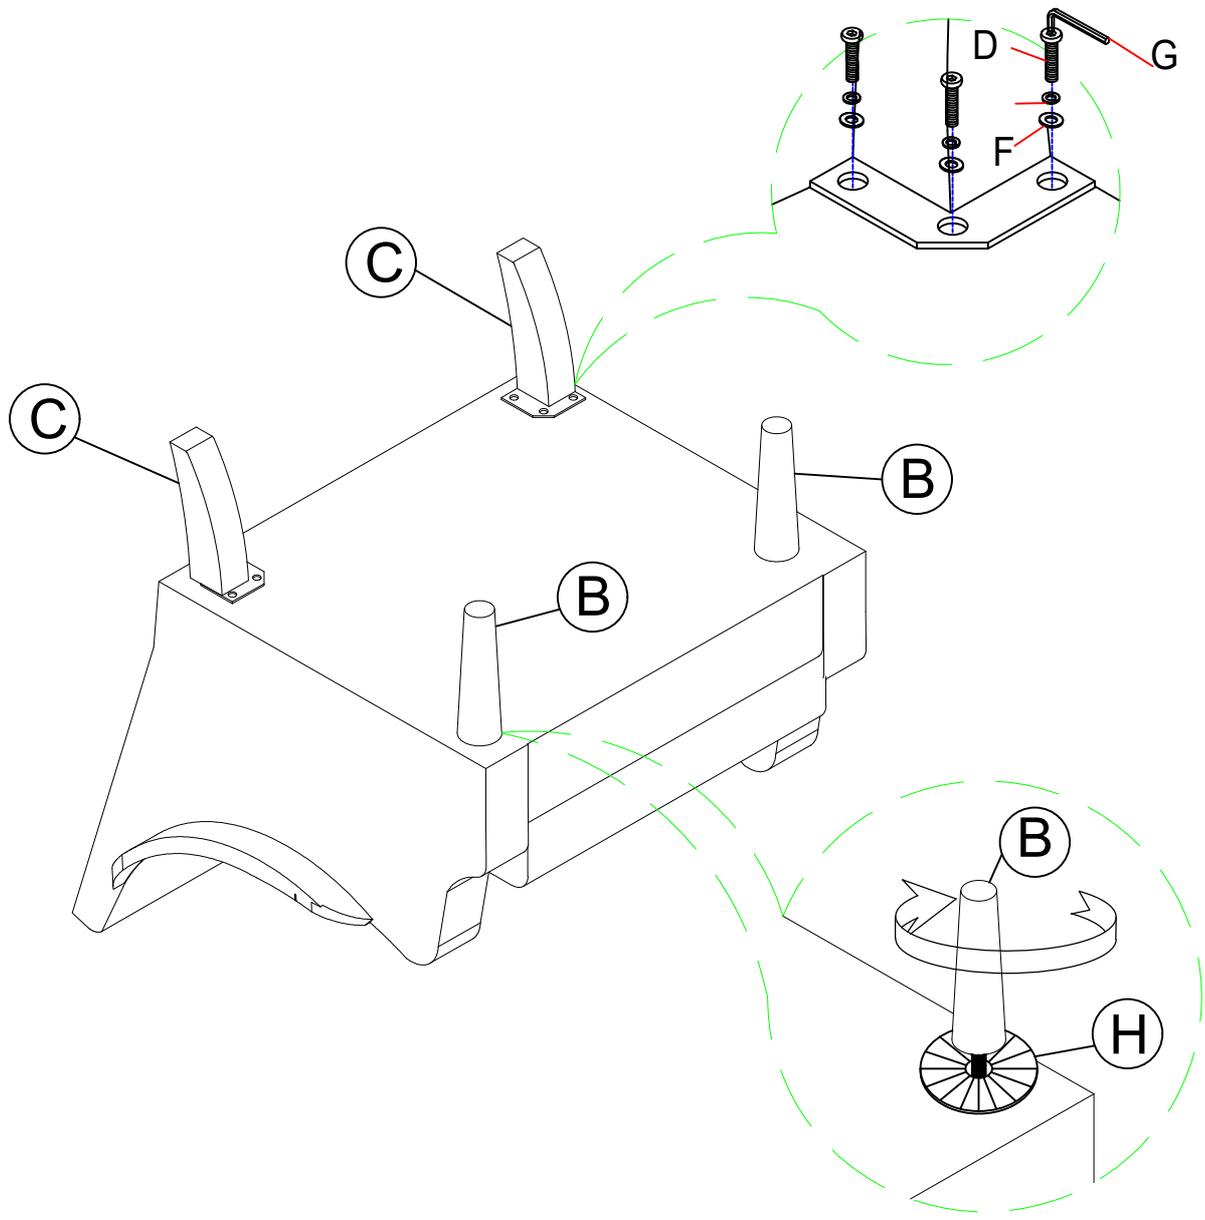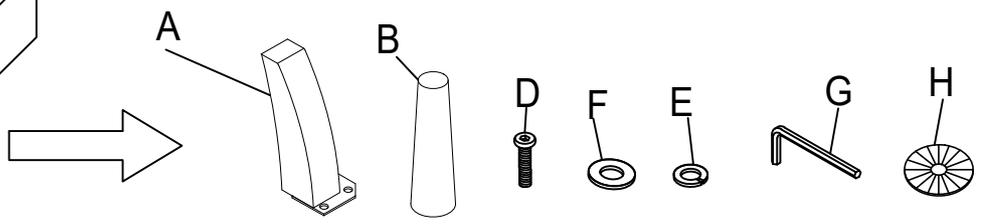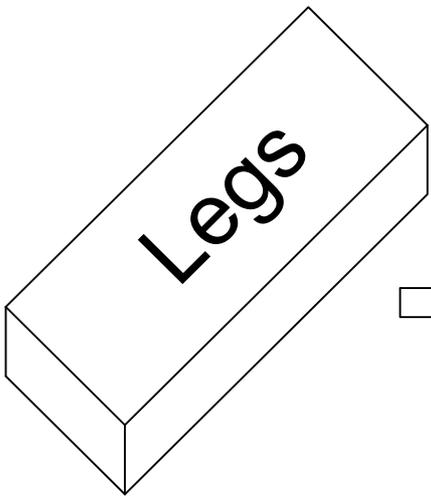

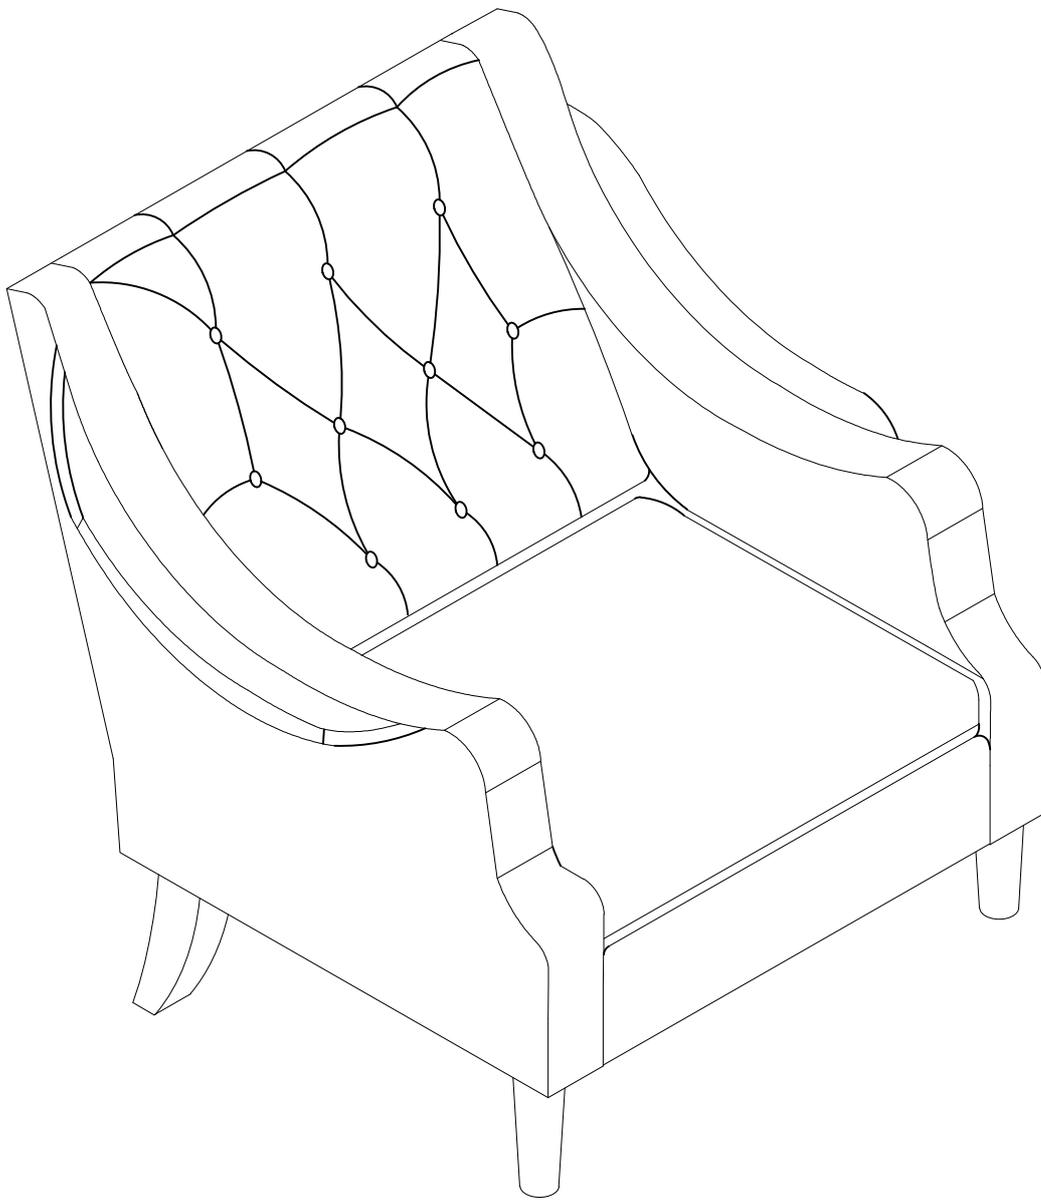

## Care Instruction for Boucle Furniture:

In order to maintain the original appearance of your boucle Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and airconditioning outlets will fade/damage Boucle.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.