


ASSEMBLY INSTRUCTION

2528S DINING CHAIR


PART LIST:





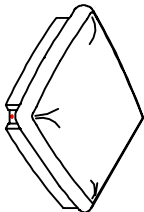


 
Back 1pc

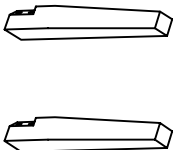


Seat 1pc




Front leg
2pcs

HARDWARE LIST				
A		L-ALLEN KEY	12mm	1 PC
B		Bolt	Ø5/16"x2-1/4"	4 PCS
C		Bolt	Ø5/16"x3"	4 PCS
D		Bolt	Ø5/16"x1-3/4"	1 PC
E		Spring Washer	Ø5/16"	9 PCS
F		Flat Washer	Ø5/16"xØ23mm	9 PCS


STEP 1

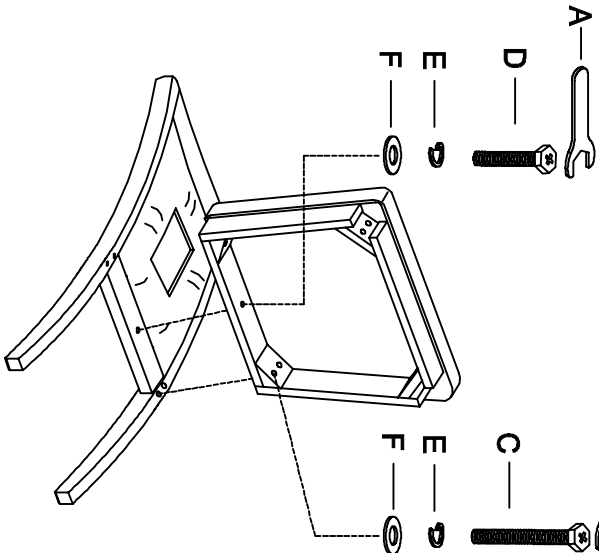

STEP 2

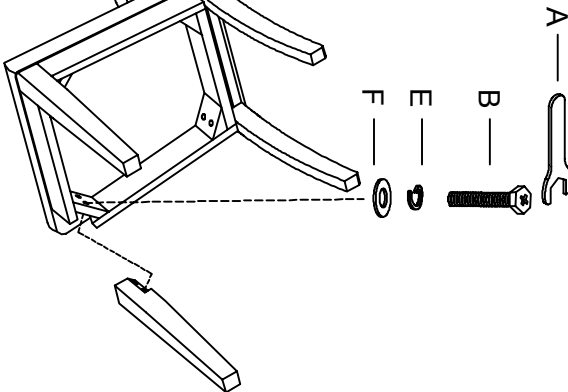

COMPLETED

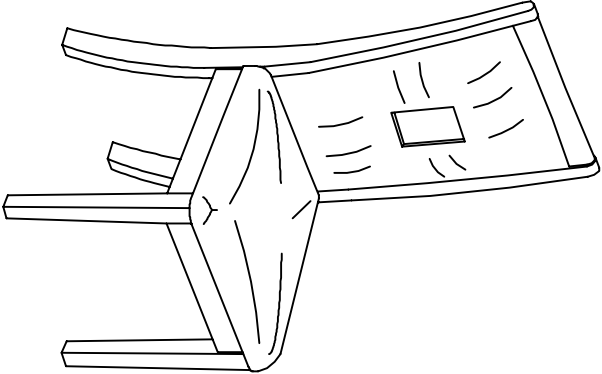

- (1) Align the seat to the chair back, insert the bolt and washer to pre-drilled holes and tighten it.
- (2) Attach the leg to the seat, insert the bolt and washer then tighten it.