



 

 


Assembly Instruction

ITEM NO.8213-1

PUSH BACK RECLINING CHAIR


NOTE:Do not use power tools for assembly.Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

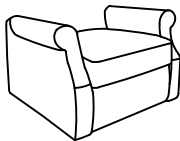PARTS LIST


NO.	DRAWING	QTY	DESCRIPTION
A		1	BACK REST
B		1	SEAT
C		2	FRONT LEG
D		2	REAR LEG
E		4	WASHER

Please follow the drawings below to assemble the item.


Step 1: Legs are stored in the non woven bag at the bottom of chair.
Please take out for assembly.

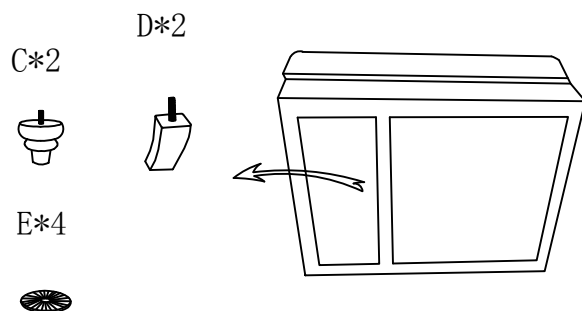


Step 3: Align the female brackets at the back onto the male brackets at the seat, insert and push to the end, make sure the brackets are secured in position.

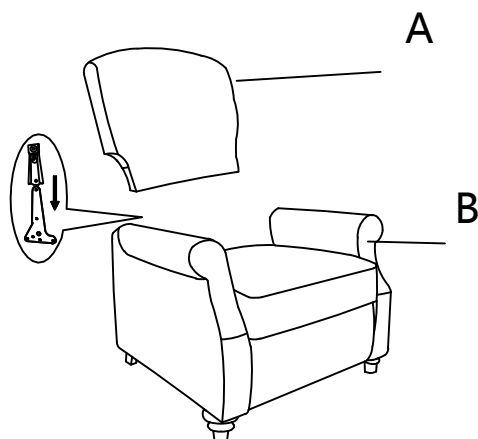

Step 2: Insert the washer onto the top of the legs, rotate the legs to tighten it. Rear leg curve must face outward.

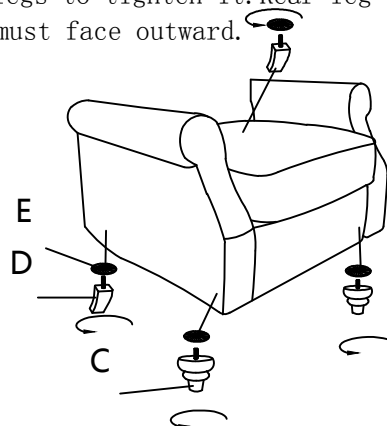

Step 4: Completed.

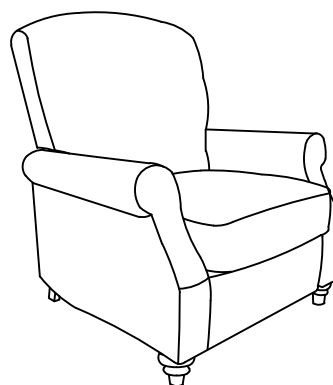

CARE INSTRUCTION FOR 100% POLYESTER FURNITURE:

In order to maintain the original appearance of your 100% polyester furniture, please follow below care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage 100% polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.
- Wipe the 100% polyester with professional cleanser.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.