

Assembly Instruction POWER LEFT SIDE RECLINING 2-SEATER ITEM NO.: 8256 / 8256GY / 8256SW / 8256FBR-LPW

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


COMPONENT LIST (2-SEATER)

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	LSF 2-SEATER


HARDWARE LIST

NO.	DRAWING	QTY	DESCRIPTION
1		2 PCS	METAL LEG
2		8 PCS	BOLT
3		8 PCS	LOCK WASHER
4		1 PC	ALLEN KEY
5		2 PCS	PLASTIC LEG
6		2 PCS	ADJUSTABLE CENTER LEG
7		2 PCS	PLASTIC GASKET
8		1 PC	ADAPTOR
9	30	1 PC	PLUG WITH WIRE


STEP#1

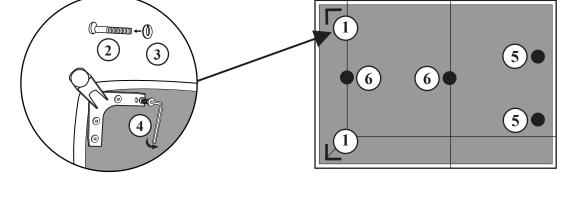


STEP#2

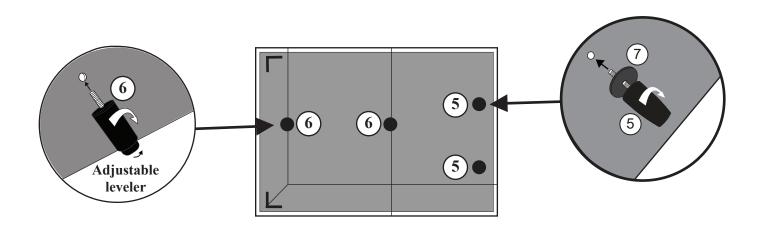

STEP#3

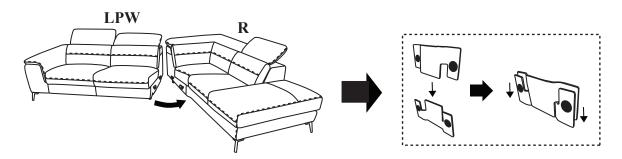

STEP#4

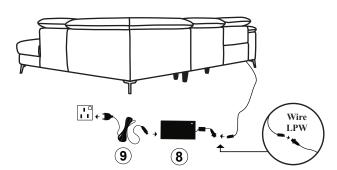

STEP#4



CARE INSTRUCTION FOR GENUINE ALL LEATHER:

In order to maintain the original appearance of your leather furniture, please follow below simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage leather.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

MARNING

- Disconnect the eletrical plug from the wall outlet before cleaning, moving, servicing or when not in use for an extended period of time.
- Plug directly into a wall outlet. Do not use an extension cord or adaptor.
- Check the condition of the power transformers, electrical cords, plugs and connectors monthly. Keeps the power
 adaptor and electrical cords away from heat sources. Never operate the unit with a damaged power adaptor,
 electrical cord, plug or connector.
- Before moving the product, please disconnect the electrical plug from the wall outlet and secure the mechanism to prevent unexpected opening or movement. Never move the product by the mechanism, legrest, handle, or reclining back.
- Do not attempt to disassemble or service the adaptor or motor. No serviceable parts are inside.
- Do not allow electrical cord to be pinched between moving parts or between the frame and the floor. Do not place cord under carpet or in location where it could become worn.
- Unplug the power cord immediately if you detect strange odors or fumes coming from the chair.



Assembly Instruction RIGHT SIDE CHAISE

ITEM NO.: 8256 / 8256GY / 8256SW / 8256FBR-R

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


COMPONENT LIST (CHAISE)

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	RSF CHAISE

HARDWARE LIST


NO.	DRAWING	QTY	DESCRIPTION
1		3 PCS	METAL LEG
2		12 PCS	BOLT
3		12 PCS	LOCK WASHER
4		1 PC	ALLEN KEY
5		1 PCS	PLASTIC LEG
6		1 PCS	CENTER ADJUSTABLE LEG
7		1 PCS	PLASTIC GASKET

STEP#1

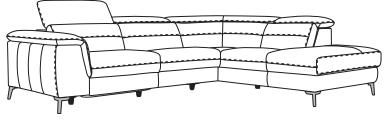





STEP#4

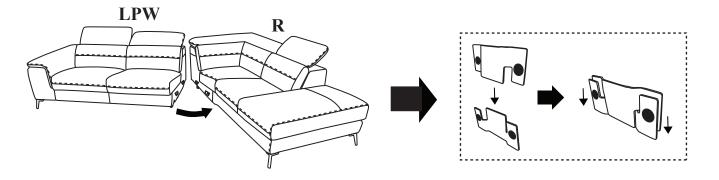

STEP#3

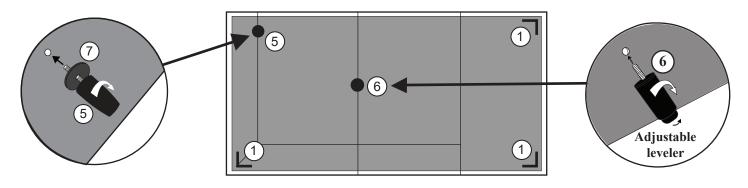

STEP#2

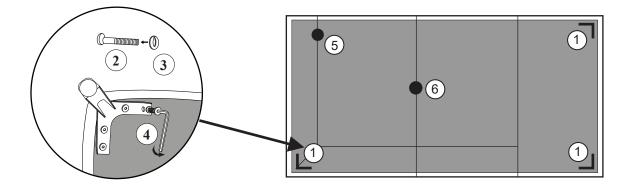

2/3

CARE INSTRUCTION FOR GENUINE ALL LEATHER:

In order to maintain the original appearance of your leather furniture, please follow below simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage leather.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

! WARNING

- Disconnect the eletrical plug from the wall outlet before cleaning, moving, servicing or when not in use for an extended period of time.
- Plug directly into a wall outlet. Do not use an extension cord or adaptor.
- Check the condition of the power transformers, electrical cords, plugs and connectors monthly. Keeps the power
 adaptor and electrical cords away from heat sources. Never operate the unit with a damaged power adaptor,
 electrical cord, plug or connector.
- Before moving the product, please disconnect the electrical plug from the wall outlet and secure the mechanism to prevent unexpected opening or movement. Never move the product by the mechanism, legrest, handle, or reclining back.
- Do not attempt to disassemble or service the adaptor or motor. No serviceable parts are inside.
- Do not allow electrical cord to be pinched between moving parts or between the frame and the floor. Do not place cord under carpet or in location where it could become worn.
- Unplug the power cord immediately if you detect strange odors or fumes coming from the chair.