

ASSEMBLING INSTRUCTIONS

ITEM NO: 1250F1S/ 1250F2S/ 1250F3S/ 1250F4S

Accent chair

Legs and Hardware are packed and stored in the bottom of the seat, please take out for assembly Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to spliting or cracking the wood.

PART	DRAWING	DESCRIPTION	QTY	PART	DRAWING	DESCRIPTION	QTY
A		Seat	1 PC	1		Bolt Ø5/16"×1-1/4"	8 PCS
B		Front/Rear LSF Metal Leg 3-2/3"×2"×8-1/2" Front/Rear RSF Metal Leg 3-2/3"×2"×8-1/2"	2 PCS 2 PCS	2	Ø	Spring Washer Ø5/16"	8 PCS
				3	0	Flat Washer Ø5/16"×3/4"	8 PCS
				4		Allen Key M4	1 PC

STEP 1:





ASSEMBLING INSTRUCTIONS

ITEM NO: 1250F1S/ 1250F2S/ 1250F3S/ 1250F4S

Accent chair

STEP 2:



Care Instruction for Boucle Furniture:

- In order to maintain the original appearance of your boucle furniture, please follow below simple care proceures: Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.

 - Sunlight and or exposure to heating and air conditioning outlets will fade/damage boucle.
 - Vacuum or wipe with a soft cloth to remove dust.
 - Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary
 - For item use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to
- avoid/prevent from damages/scratches and discoloration.