

## **Assembly Instruction**

ITEM NO.: 9634DGY-3 DOUBLE RECLINING SOFA

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to spliting or cracking the wood.

## **Component list**

| No | Drawing  | Qty | Description      |
|----|----------|-----|------------------|
| Α  | (TTTTTT  | 1   | SEAT             |
| В  | <b>H</b> | 1   | LSF BACK REST    |
| С  | B        | 1   | MIDDLE BACK REST |
| D  |          | 1   | RSF BACK REST    |
| E  |          | 1   | LSF EAR          |
| F  |          | 1   | RSF EAR          |
| 1  |          |     |                  |





## Care Instruction for Polished Microfiber Furniture:

In order to maintain the original appearance of your Polished Microfiber Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Polished Microfiber.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.