









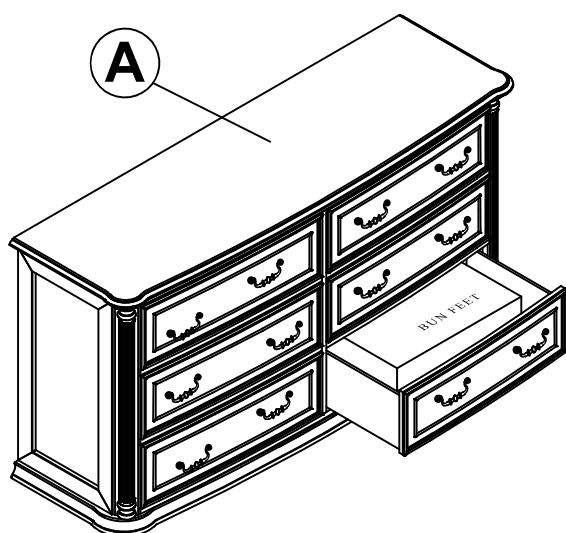


ASSEMBLY INSTRUCTION



ITEM NO: 1699-6 MIRROR & 1699-5 DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART LIST				HARDWARE LIST				
NO.	Description	Sketch	Q'ty	NO.	Description	Sketch	Size	Q'ty
A	DRESSER		1PC	1	BOLT		1/4"*35mm	8PCS
B	MIRROR		1PC	2	SPRING WASHER		Ø1/4"*10D*1.1	8PCS
C	BUNFOOT		4PCS	3	FLAT WASHER		1/4"*22D*2	8PCS
D	MIRROR SUPPORTS		2PCS	4	ALLEN KEY		4mm	1PC
E	SUPPORT LEG		1PC	5	TIPPING RESTRAINT			1SET



Step 1

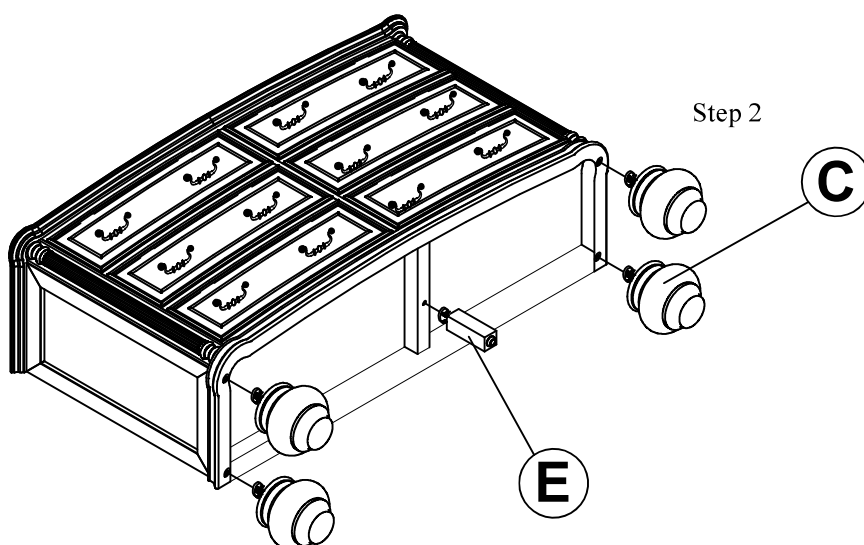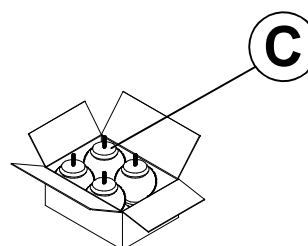


It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.


ASSEMBLY INSTRUCTION

ITEM NO: 1699-6 MIRROR & 1699-5 DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


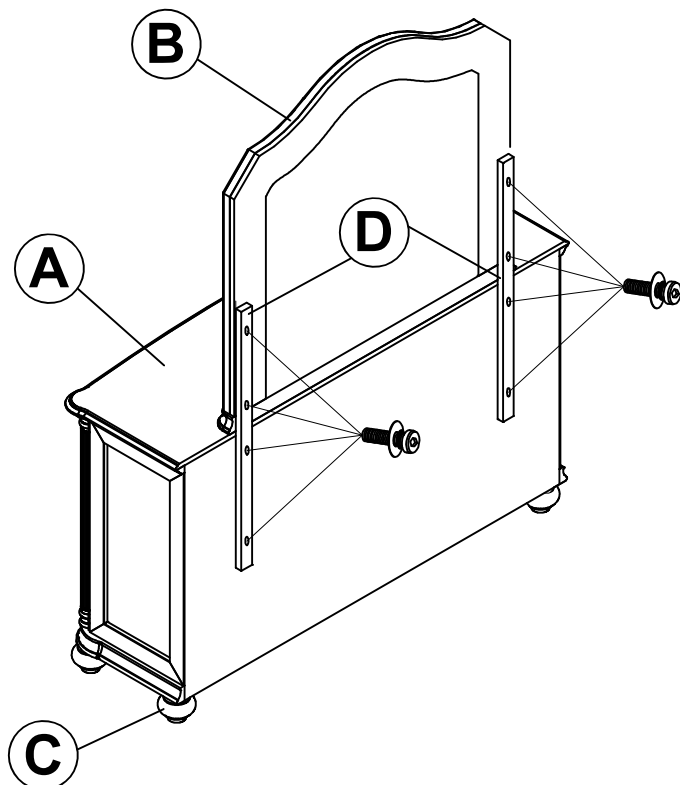


Step 3

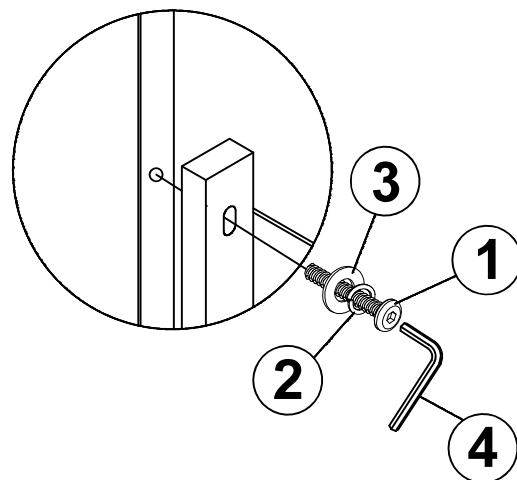

Step 4

PHILLIPS SCREW
DRIVER
(not provided)

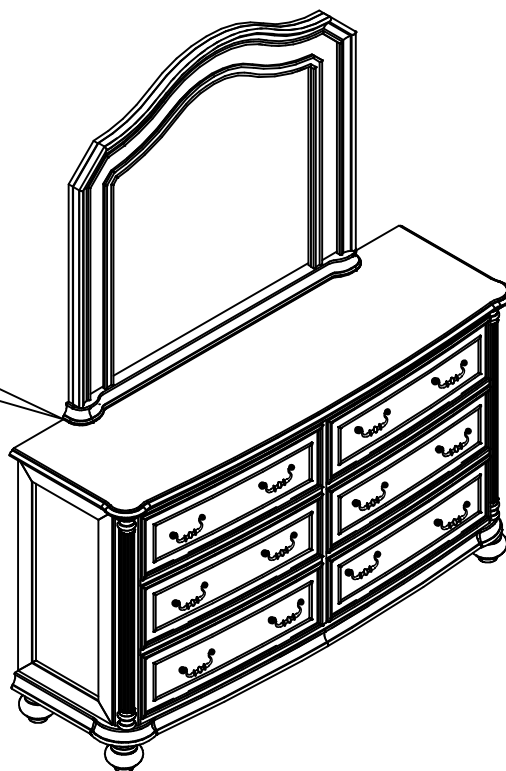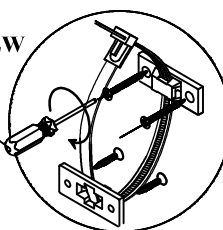

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.