







# ASSEMBLY INSTRUCTION

ITEM # : 2056 - 9 CHEST

| PART LIST |          |      |
|-----------|----------|------|
| 1         | CHEST    | 1PC  |
| 2         | BUN FOOT | 4PCS |

| ANTI-TIPPING HARDWARE PACK IN - 9 |  |                         |      |
|-----------------------------------|--|-------------------------|------|
| A                                 |  | BRACKET                 | 2PCS |
| B                                 |  | TIE WRAP                | 1PC  |
| C                                 |  | LONG SCREW (#8 x 2")    | 1PC  |
| D                                 |  | SHORT SCREW (#8 x 5/8") | 1PC  |

| HARDWARE LIST IN - 9 |  |                       |      |
|----------------------|--|-----------------------|------|
| E                    |  | BOLT (Ø 1/4" x 2")    | 8PCS |
| F                    |  | SPRING WASHER (Ø1/4") | 8PCS |
| G                    |  | FLAT WASHER (Ø1/4")   | 8PCS |
| H                    |  | ALLEN KEY             | 1PC  |

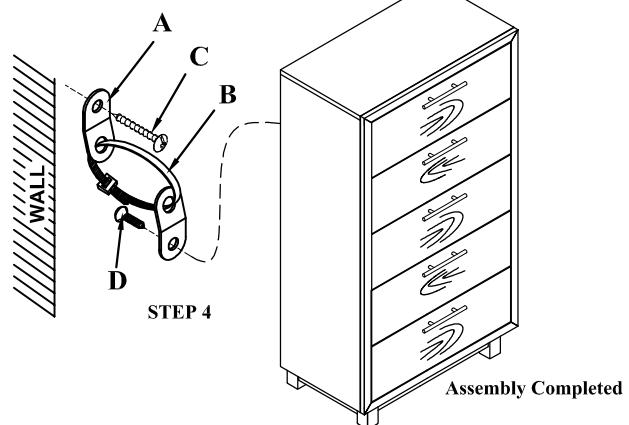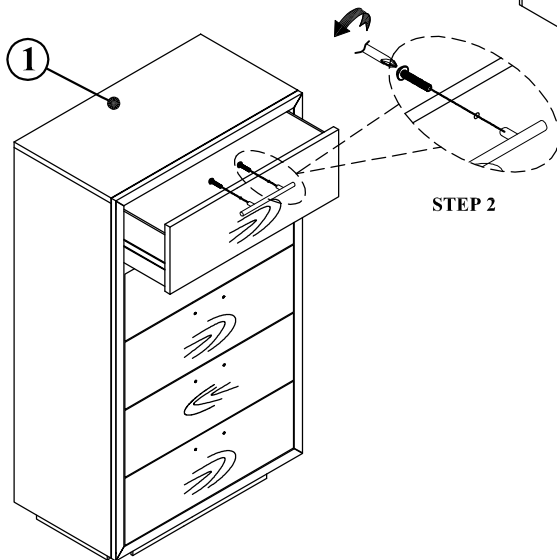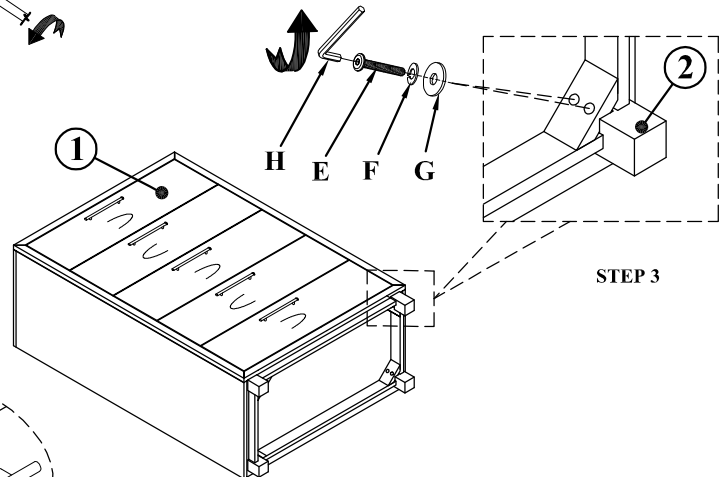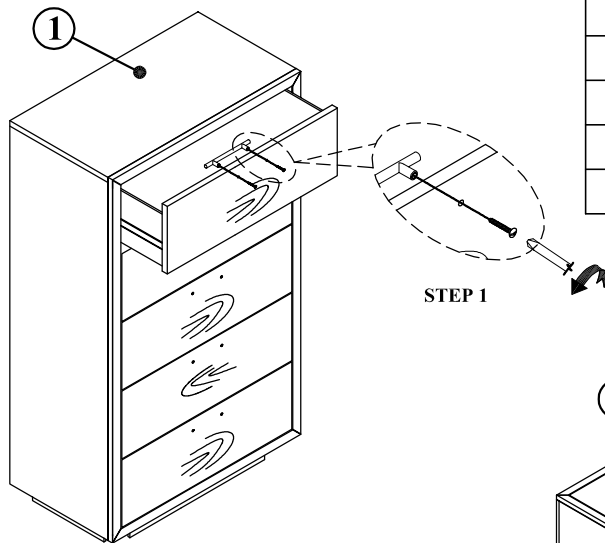

MADE IN VIETNAM



For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.