



# ASSEMBLY INSTRUCTION


ITEM#: 2168 QUEEN BED  
 2168-1 QUEEN HEADBOARD  
 2168-2 QUEEN FOOTBOARD  
 2168-3 QUEEN RAILS AND SLATS

ITEM#: 2168WW QUEEN BED  
 2168WW-1 QUEEN HEADBOARD  
 2168WW-2 QUEEN FOOTBOARD  
 2168WW-3 QUEEN RAILS AND SLATS


| PART LIST |                      |      |
|-----------|----------------------|------|
| A         | HEADBOARD            | 1PC  |
| B         | HEADBOARD POST (L&R) | 2PCS |
| C         | FOOTBOARD            | 1PC  |
| D         | FINIAL               | 4PCS |
| E         | SIDE RAIL            | 2PCS |
| F         | SLAT                 | 3PCS |
| G         | SUPPORT LEG          | 3PCS |

| HARDWARE LIST IN HEADBOARD CARTON |  |                         |      |
|-----------------------------------|--|-------------------------|------|
| 1                                 |  | BOLT 5/16"x1-3/4"L      | 8PCS |
| 2                                 |  | SPRING WASHER 5/16"     | 8PCS |
| 3                                 |  | FLAT WASHER 5/16"X19MM  | 8PCS |
| 4                                 |  | ALLEN WRENCH 5/16"X12MM | 1PC  |


| HARDWARE LIST IN RAIL CARTON |  |                               |      |
|------------------------------|--|-------------------------------|------|
| 5                            |  | WOOD SCREW 8#x1-1/4"L         | 6PCS |
| 6                            |  | ALL-THREAD BOLT 5/16"x3-1/4"L | 8PCS |
| 7                            |  | BENT WASHER                   | 8PCS |
| 8                            |  | HEX NUT 5/16"x18MM            | 8PCS |
| 9                            |  | ALLEN WRENCH 5/16"            | 1PC  |

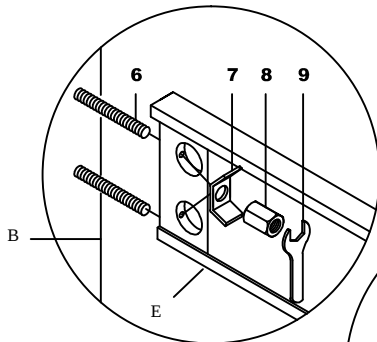


STEP 2

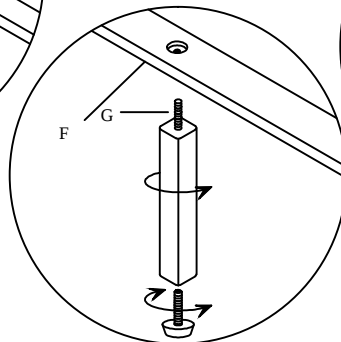


STEP 3

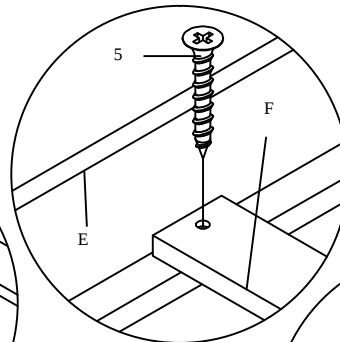


STEP 4

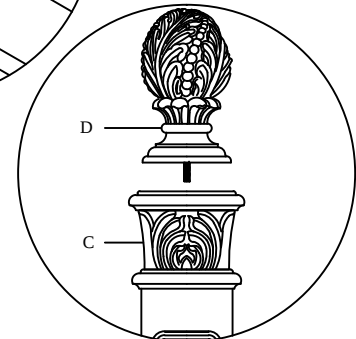

STEP 5

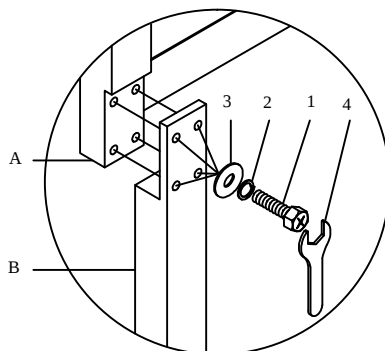

STEP 1

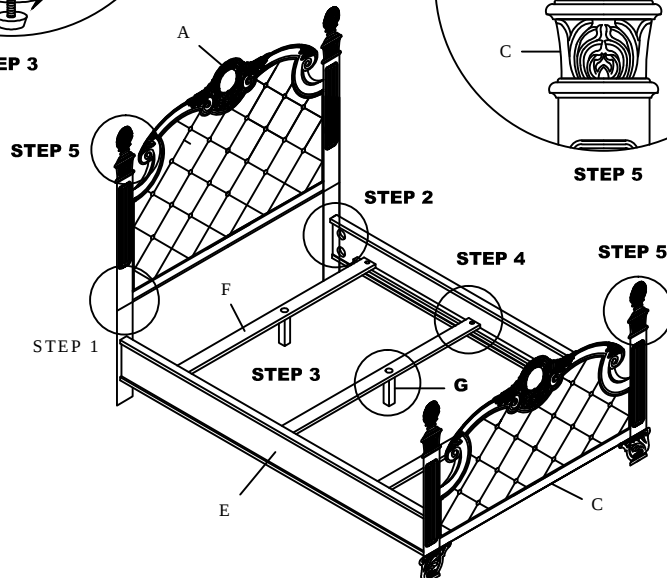

For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.