

ASSEMBLY INSTRUCTIONS







INSTRUCTION D'ASSEMBLAGE

ITEM NO: 9899GY/SN-1

Chair/ Fauteuil

- ▲ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.
- ▲ Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surfaces dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.


PARTS LIST

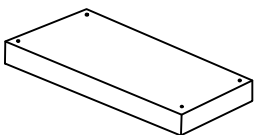NO.	DRAWING	QTY	DESCRIPTION
A		1	BACK REST
B		1	BACK CUSHION LSF/RSF/MIDDLE
C		1	LSF ARM
D		1	RSF ARM
E		1	SEAT CUSHION
F		1	SEAT FRAME

HARDWARE LIST

NO.	SKETCH	QTY	DESCRIPTION
1		4	BOLT
2		4	PLASTIC WASHER
3		4	BUN FOOT

BEFORE ASSEMBLY/ LISTE DE PIECES

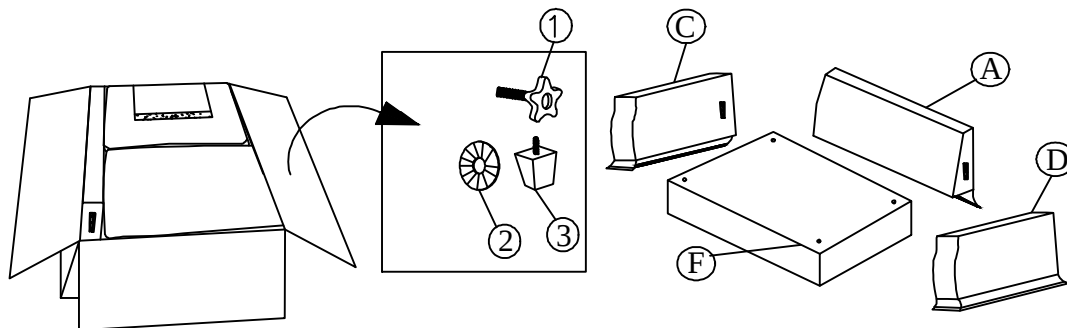


Please take out all parts from seat frame for assembly

CHAIR ASSEMBLY INSTRUCTION

Note:


Place/lay flat Seat Frame on carton or object.

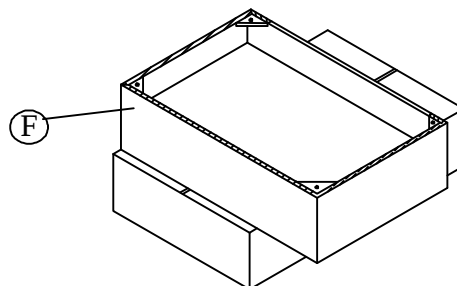

STEP 1:

Pull up arm sleeve, align and attach both Arms to the Seat Frame, insert bolts and rotate 3 to 5 times to engage it .
DO NOT FULLY TIGHTEN IT.

Pull down arm cloth to the bottom of the Seat Frame, attach Velcro to the Seat Frame, make sure it is all fixed properly.

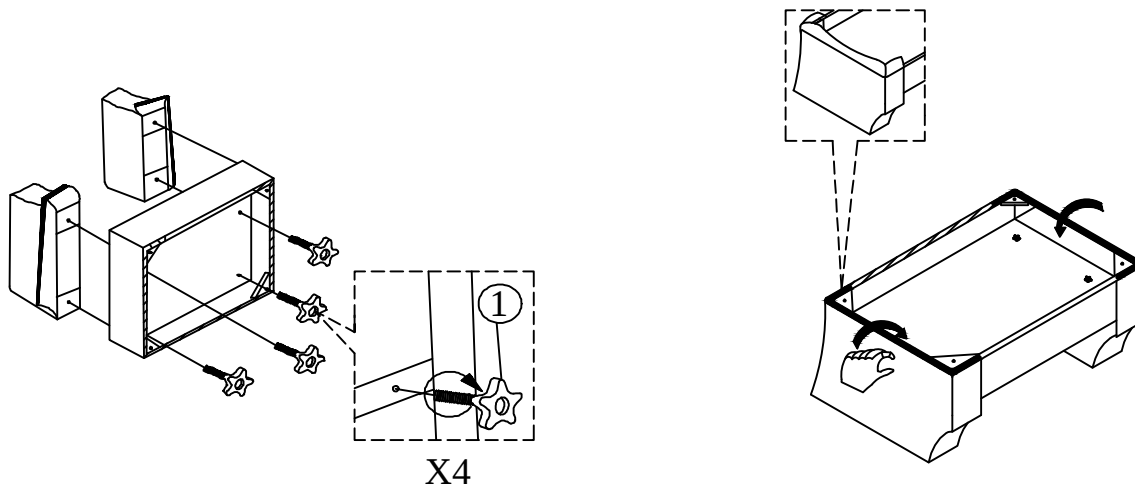

CARE INTRUCTION FOR FABRIC FURNITURE


In order to maintain the original appearance of your funiture, please follow below care procedures.

°Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and / or exposure to heading and air conditioning outlets will fade/damage fabric. Do not place your upholstered furniture too close to windows, radiators, r vents and be sure to use window treatments to block the sun's rays.

°Wipe with a soft brush to remove dust.



STEP 2 :

Assemble Bun Foot onto Seat Frame.

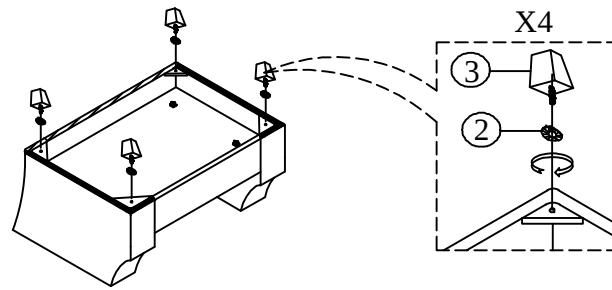

STEP 3 :

Align and insert metal brackets on Back Rest to assembled Seat Frame, push to the end and make sure it is secure in position. Pull down Back Rest cover and attach Velcro to the bottom of Seat Frame, make sure it's all fixed properly.

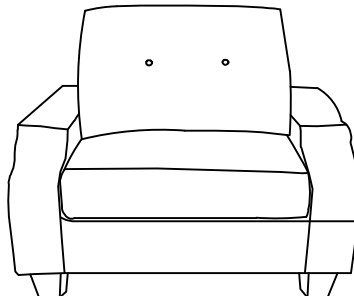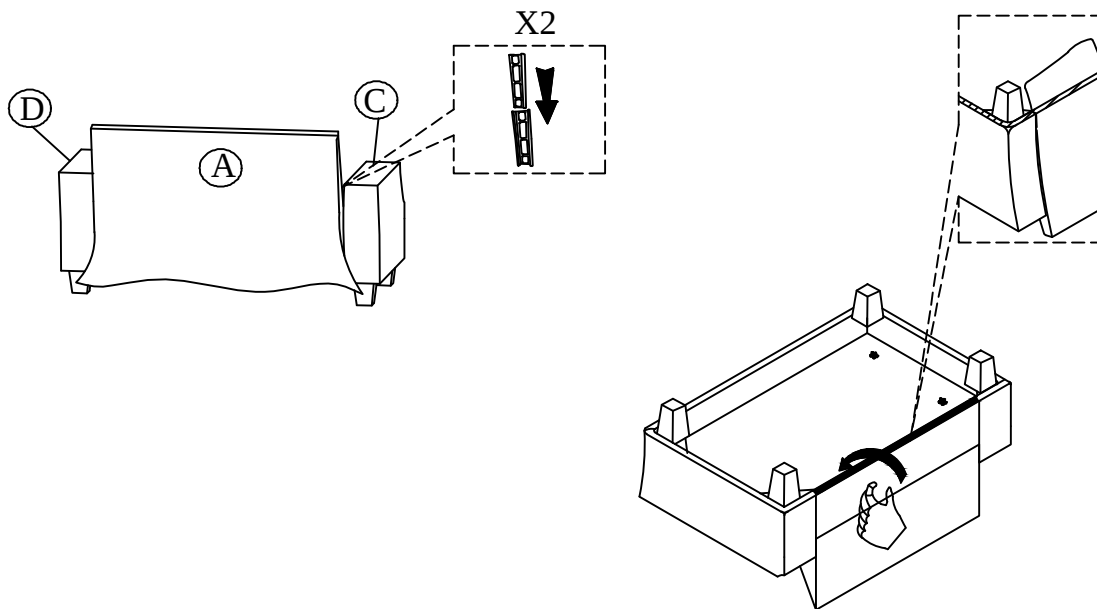

CARE INSTRUCTION FOR FABRIC FURNITURE

In order to maintain the original appearance of your furniture, please follow below care procedures.

°Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and / or exposure to heating and air conditioning outlets will fade/damage fabric. Do not place your upholstered furniture too close to windows, radiators, or vents and be sure to use window treatments to block the sun's rays.

°Wipe with a soft brush to remove dust.