









Assembly Instruction

ITEM NO: 1294GY/BR-1

ACCENT CHAIR


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

COMPONENT LIST

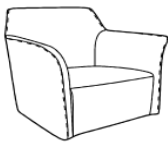
NO.	DRAWING	QTY	DESCRIPTION
A		1	CHAIR
B		4	METAL LEG
C		8	BOLT(5/16"*1-3/8")
D		8	LOCK WASHER(1/2"*1/2")
E		8	FLAT WASHER (4/5"*4/5")
F		1	ALLEN KEY(1"*3")

STEP 1. Legs are stored in the bubble bag at the bottom of chair, please take out for assembly.

STEP 2. Align the legs onto the pre-drilled holes at the bottom of the unit, Insert bolts and washers then tighten with Allen key.

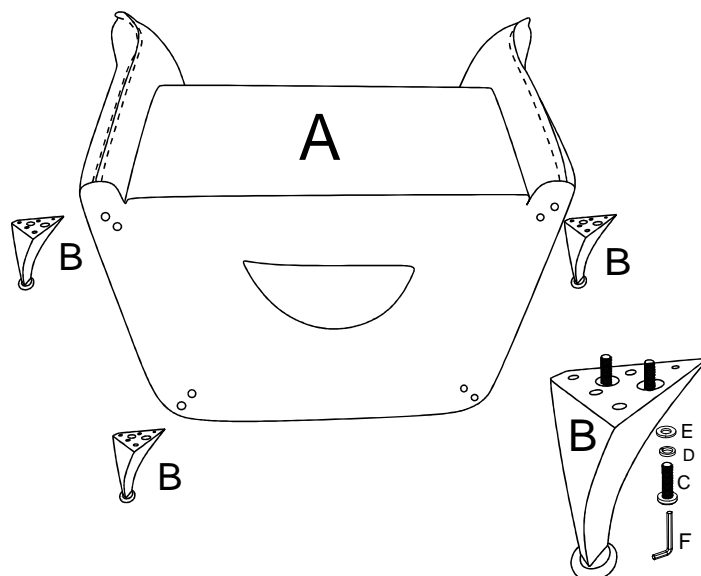


STEP 3.Completed.

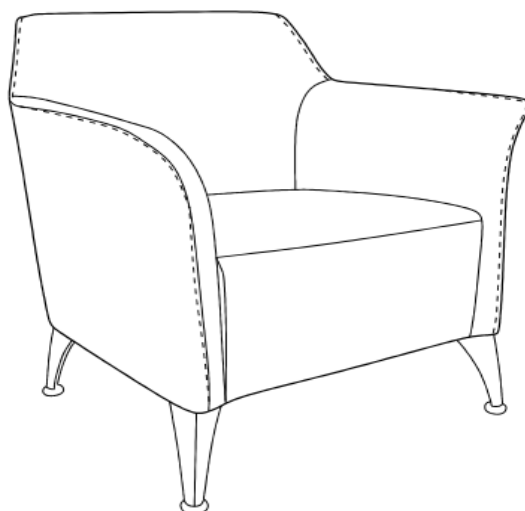

CARE INSTRUCTION FOR PU FURNITURE:

In order to maintain the original appearance of your PU furniture, please follow below care procedures:

- **Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and / or exposure to heating and air conditioning outlets will fade/damage PU furniture, Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use window treatments to block the sun's rays.**
- **Wipe with a soft brush to remove dust.**
- **Wipe PU furniture, with professional cleanser.**

 **For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.**