



ASSEMBLY INSTRUCTION





ITEM # 5906WH-24

DESCRIPTION: COUNTER HEIGHT CHAIR

HOMÉLEGANCE

NO	PARTS LIST	QTY
A	CHAIR BACK	1pc
B	SEAT FRAME	1pc
C	LEFT LEG	1pc
D	RIGHT LEG	1pc
E	FRONT STRETCHER	1pc
F	SIDE STRETCHER(LEFT)	1pc
G	SIDE STRETCHER(RIGHT)	1pc

NO	HARDWARE LIST	QTY
1	BOLT (5/16"x 80mm)	4pcs
2	BOLT (5/16"x 65mm)	4pcs
3	BOLT (5/16"x 38mm)	3pcs
4	SPRING WASHER (5/16"xØ13x1.5mm)	11pcs
5	FLAT WASHER (5/16"xØ19x1.5mm)	11pcs
6	WOOD SCREW (M4x38mm)	6pcs
7	ALLEN KEY	1pcs

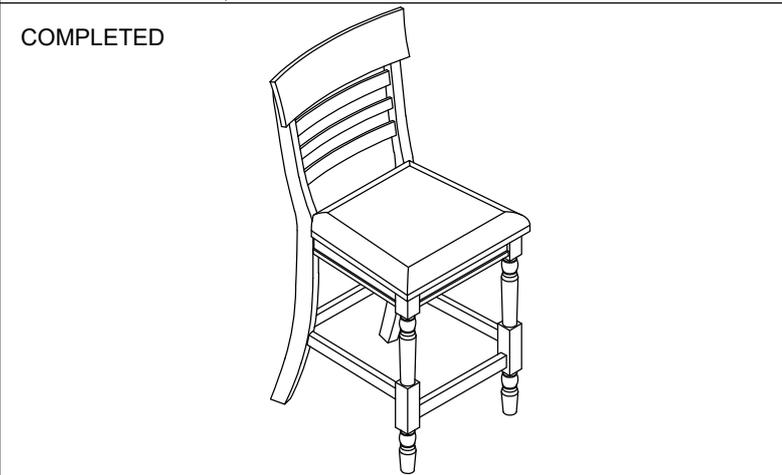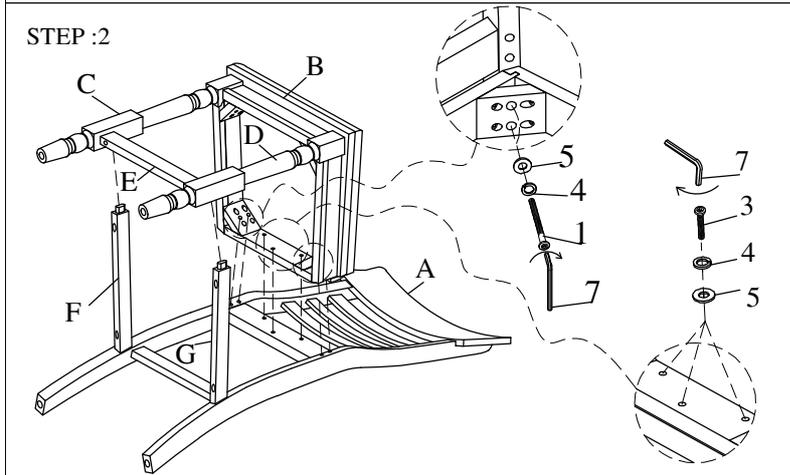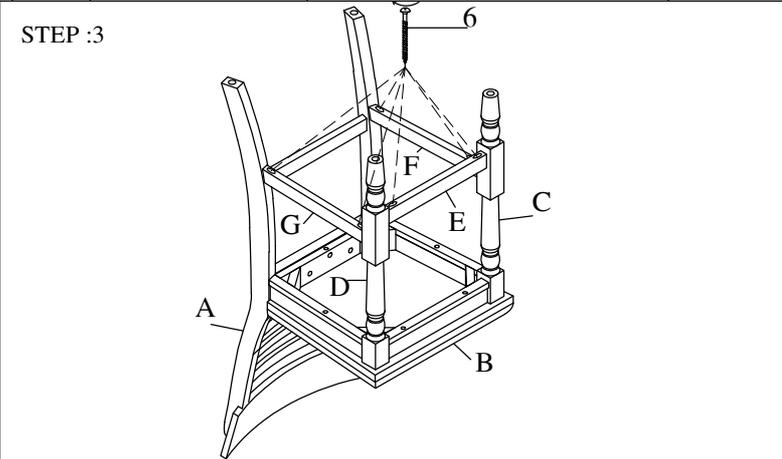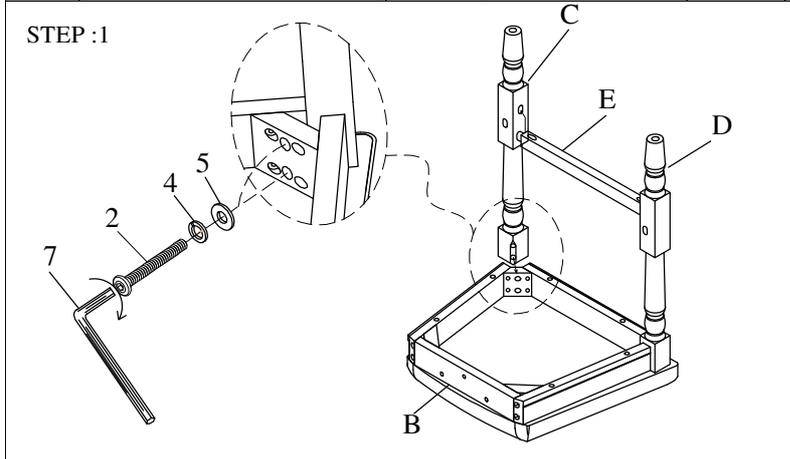

! For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration
 Do not tighten bolts until completely assembled
 Care instructions:
 . Dust often using a clean, soft, dry and lint-free cloth.
 . When blot spills, wipe with a clean, damp cloth immediately.
 . We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
 . Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.