

STEP 1

Autodesk

## Assembly Instruction

ITEM#: 1681-5 DRESSER ITEM#: 1681-6 MIRROR


## PART LIST


1	DRESSER	1PC
2	MIRROR	1PC
3	MIRROR SUPPORT	2PCS

ANTI-TIPPING HARDWARE PACK IN-5						
<b></b>	BRACKET	2PCS				
þ	TIE WRAP	1PC				
<b>Emm</b>	SCREW #8x2"L	1PC				
(R)DID	SCREW #8x5/8"L	1PC				

HARDWARE LIST IN-5

Е		B0LT Ø5/16"X1-1/2"	4PCS
F	()	B0LT Ø5/16"X1-3/4"	4PCS
G	0	FLAT WASHER Ø5/16"	8PCS
Н	<b>9</b>	SPRING WASHER Ø5/16"	8PCS
Ι		ALLEN KEY Ø5/16"	1PC

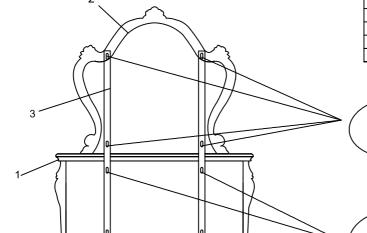




С



-REMOVE ANTI-TIPPING PACK FROM BACK PANEL.ASSEMBLE IT TO AVOID TIPPING

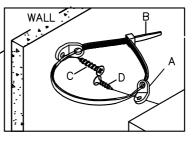

For items use on wooden floor, hard surfaces or carpets it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration

MADE IN VIETNAM

A